Installation Guide

AMPELITE

AMPELITE PolyRib

AMPELITE
Australian owned

Quality System

Quality Endorsed Company
AS/NZS ISO 9001
QEC 4787

SAI GLOBAL

AL_SD07-14v1 ©Copyright September 2014

BEFORE STARTING:

STORAGE:

PROTECT SHEETS FROM
SUN AND RAIN
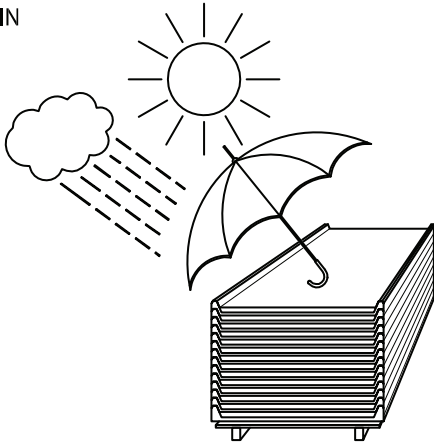
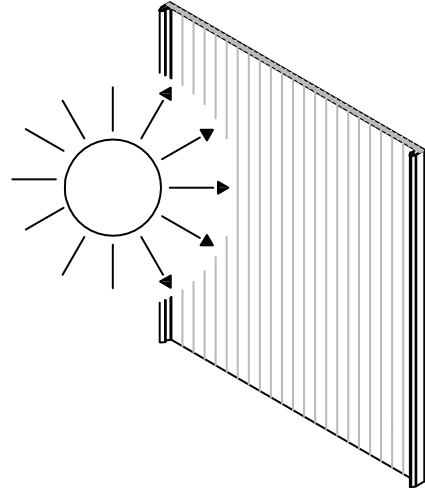### PROTECT SIDE:

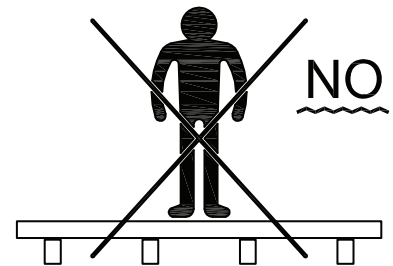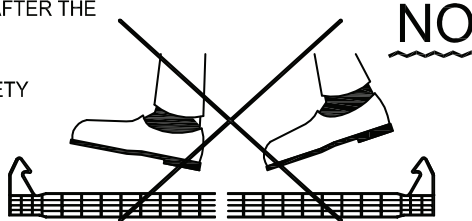AMPELITE PolyRib IS UV PROTECTED ON BOTH SIDES

SAFETY:

IT IS FORBIDDEN TO WALK ON AMPELITE PolyRib POLYCARBONATE SHEETS

DO NOT WALK ON SHEETS BEFORE AND AFTER THE INSTALLATION

DURING THE INSTALLATION USE ALL SAFETY DEVICES PROVIDED BY LAWS IN FORCE
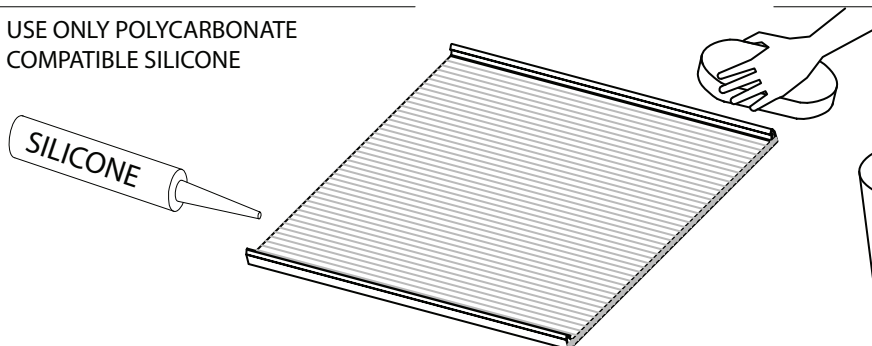
NO

NO

CARE OF THE PRODUCT:

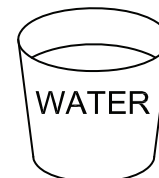POLYCARBONATE SUFFERS THE CHEMICAL AGGRESSION OF CERTAIN PRODUCTS SO:

1. SILICONE:

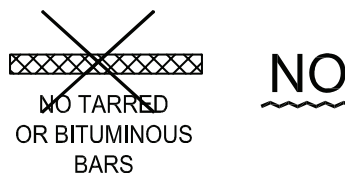USE ONLY POLYCARBONATE
COMPATIBLE SILICONE

SILICONE

2. CLEANING OF SHEETS:

FOR THE CLEANING
OF THE SHEETS USE *WATER*

WATER

3. GASKETS :

DO NOT USE
TARRED OR BITUMINOUS GASKETS

NO TARRED
OR BITUMINOUS
BARS

NO

AMPELITE PolyRib SHEET

FASTENING CLAMP IN STAINLESS STEEL

POLYCARBONATE CLOSING CAP

POLYCARBONATE JOINING STRIP
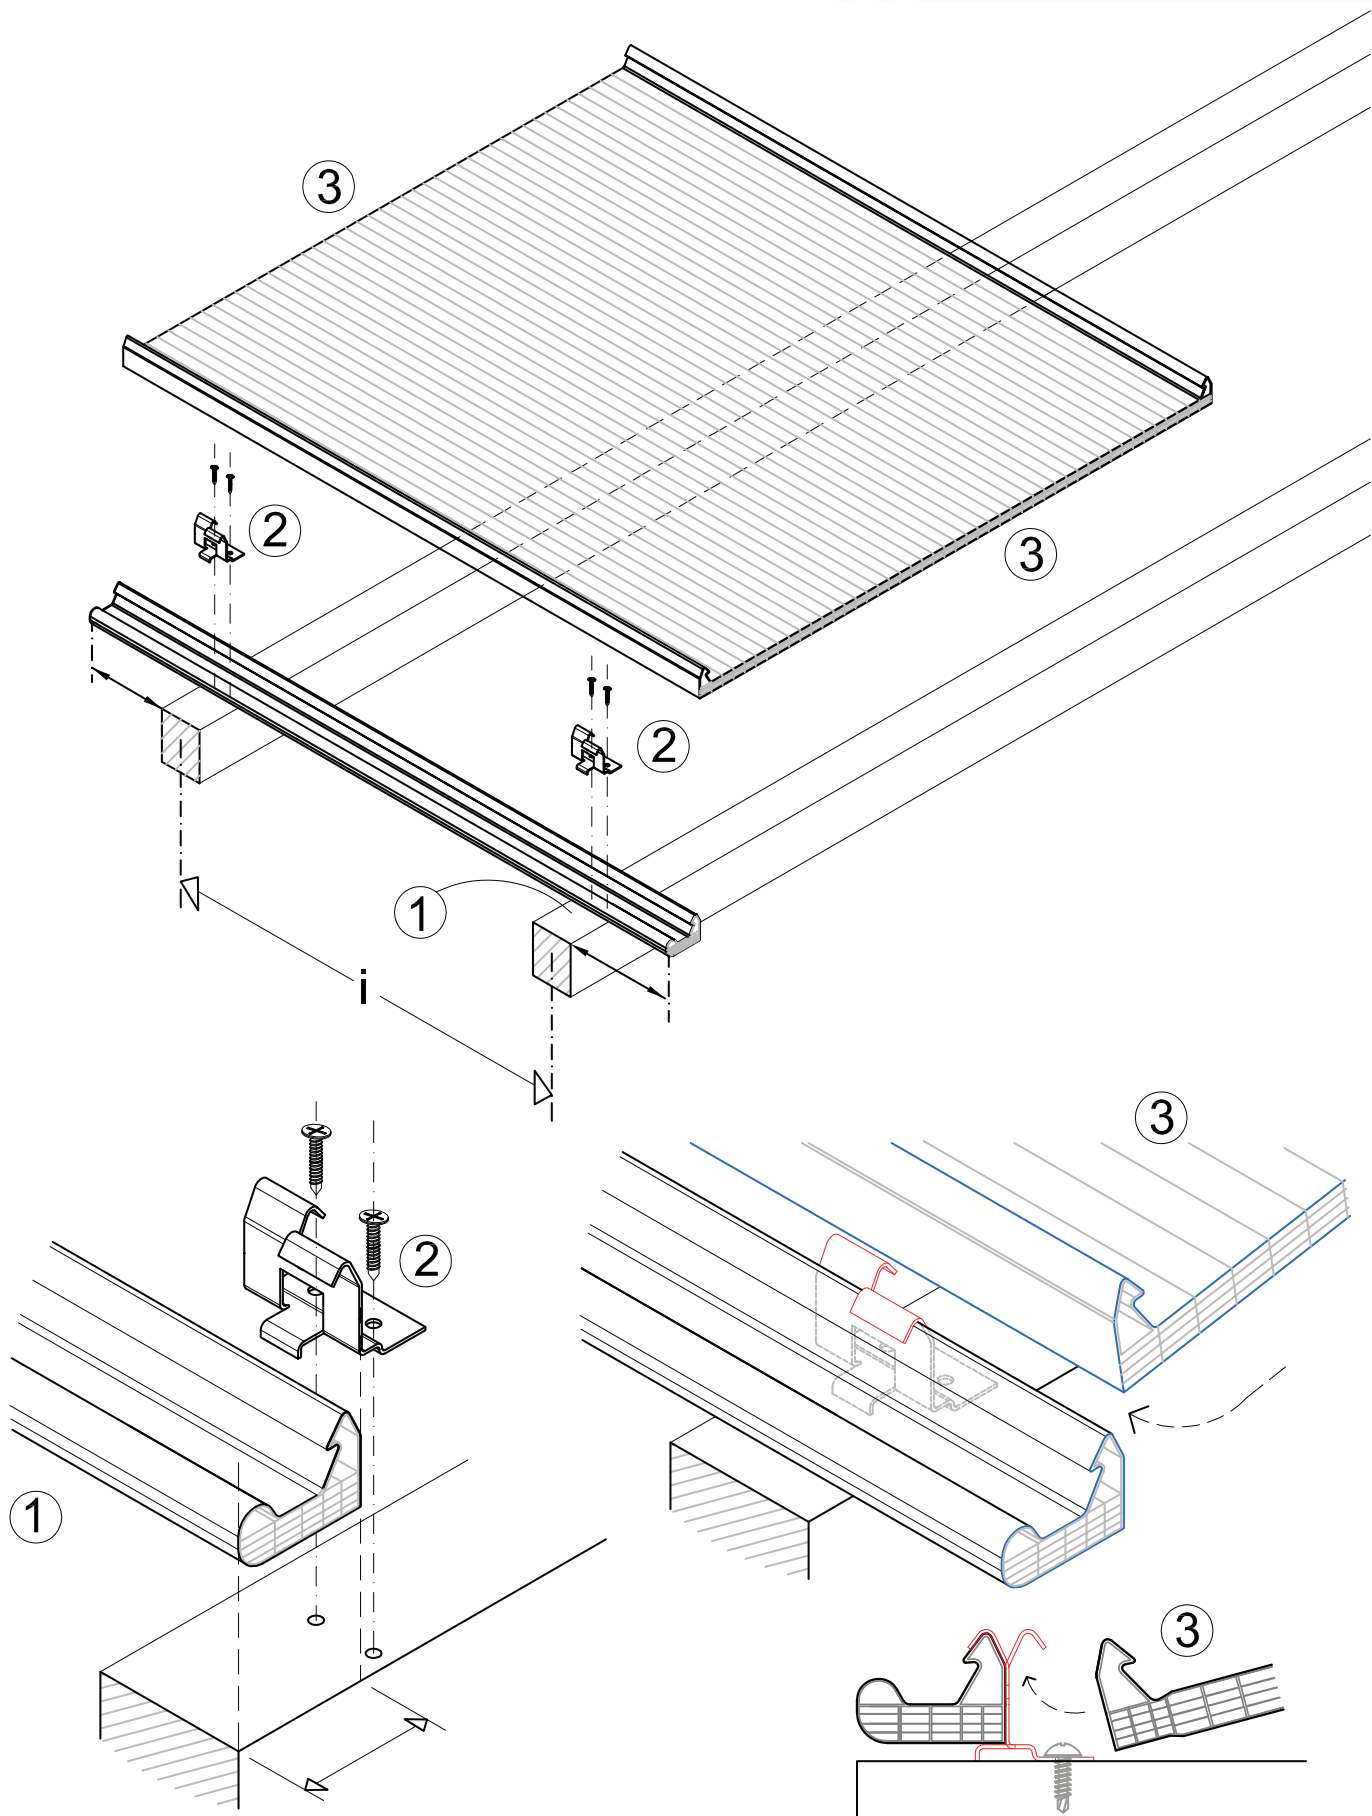
POLYCARBONATE EDGE CLOSURE

POLYCARBONATE END STRIP

TOP & BOTTOM CLOSING CHANNEL IN
ANODISED ALUMINIUM

BREATHER TAPE

SEALING TAPE

① ② ③

INSTALLATION

RUBBER MALLET

Ampelite PolyRib
PolyRib

INSTALLATION

Ampelite PolyRib
Installation Guide
September 2014

1

n ....

8.A

8.B

8.A ① 8.A ②

OK

8.A

8.B ①

cutting

8.B ①

n ....

8.B ②

8.B ③

8.B

8.B ④

OK

⑪

⑨

⑨

⑨

⑨

⑨

⑪

⑨

⑩

⑨

⑩